



SPARK

How to recharge SPARK vehicle

VW e-Up!

1. Please open the vehicle's charging latch and remove the plastic cover. In case of a delay, please push the "Unlock" button on the vehicle ignition key again;
2. Approach the SPARK charging station and remove its charging cable;
3. Plug the charging cable into the vehicle's charging port (a yellow LED light will flash);
4. Activate SPARK charging station with a blue plastic token, which is attached to the vehicle's ignition key;
5. The vehicle is in a charging mode when a green LED light flashes on the vehicle's charging port and a blue LED light flashes on the charging station;
6. The vehicle's battery is fully charged when the LED light turns green on the charging station;
7. In case you are unable to pull out the charging cable out of the vehicle's charging port, please push the "Unlock" button on the vehicle ignition key again.

VW e-GOLF

1. Please open the vehicle's charging latch. In case of a delay, please push the "Unlock" button on the vehicle ignition key again;
2. Approach the SPARK charging station and remove its charging cable;
3. Plug the charging cable into the vehicle's charging port (a yellow LED light will flash);
4. Activate SPARK charging station with a blue plastic token, which is attached to the vehicle's ignition key;
5. The vehicle is in a charging mode when a green LED light flashes on the vehicle's charging port and a blue LED light flashes on the charging station;
6. The vehicle's battery is fully charged when the LED light turns green on the charging station;
7. In case you are unable to pull out the charging cable out of the vehicle's charging port, please push the "Unlock" button on the vehicle ignition key again.

VW ID.3

1. Please open the vehicle's charging latch. In case of a delay, please push the "Unlock" button on the vehicle ignition key again;
2. Approach the SPARK charging station and remove its charging cable;
3. Plug the charging cable into the vehicle's charging port (a yellow LED light will flash);
4. Activate SPARK charging station with a blue plastic token, which is attached to the vehicle's ignition key;



S P A R K

5. The vehicle is in a charging mode when a green LED light flashes on the vehicle's charging port and a blue LED light flashes on the charging station;
6. The vehicle's battery is fully charged when the LED light turns green on the charging station;
7. In case you are unable to pull out the charging cable out of the vehicle's charging port, please push the "Unlock" button on the vehicle ignition key again.

Nissan Leaf 40

1. Please open the vehicle's charging latch by pushing an appropriate button on the vehicle ignition key or inside the vehicle;
2. Approach the SPARK charging station and remove its charging cable;
3. Plug the charging cable into the vehicle's charging port;
4. Activate SPARK charging station with a blue plastic token, which is attached to the vehicle's ignition key;
5. The vehicle is in a charging mode when light flashes under the vehicle's windshield and a blue LED light flashes on the charging station;
6. The vehicle's battery is fully charged when the LED light turns green on the charging station;
7. In case you are unable to pull out the charging cable out of the vehicle's charging port, please push an appropriate button on the vehicle ignition key or inside the vehicle.

Nissan e-NV200

1. Please open the vehicle's charging latch by pushing an appropriate button inside the vehicle;
2. Approach the SPARK charging station and remove its charging cable;
3. Plug one adapter's (you will find it inside the vehicle) end to the charging cable, another - into the vehicle's charging port;
4. Activate SPARK charging station with a blue plastic token, which is attached to the vehicle's ignition key;
5. The vehicle is in a charging mode when light flashes under the vehicle's windshield and a blue LED light flashes on the charging station;
6. The vehicle's battery is fully charged when the LED light turns green on the charging station;
8. In case you are unable to pull out the charging cable out of the vehicle's charging port, please push an appropriate button inside the vehicle;
9. Adapter must remain in the vehicle.

Hyundai IONIQ Electric

1. Please open the vehicle's charging latch by pushing an appropriate button inside the vehicle;
2. Approach the SPARK charging station and remove its charging cable;
3. Plug the charging cable into the vehicle's charging port;
4. Activate SPARK charging station with a blue plastic token, which is attached to the vehicle's ignition key;



S P A R K

5. The vehicle is in a charging mode when light flashes under the vehicle's windshield and a blue LED light flashes on the charging station;
6. The vehicle's battery is fully charged when the LED light turns green on the charging station;
7. In case you are unable to pull out the charging cable out of the vehicle's charging port, please push the "Unlock" button on the vehicle ignition key again.

Hyundai KONA

1. Please open the vehicle's charging latch;
2. Approach the SPARK charging station and remove its charging cable;
3. Plug the charging cable into the vehicle's charging port;
4. Activate SPARK charging station with a blue plastic token, which is attached to the vehicle's ignition key;
5. The vehicle is in a charging mode when light flashes under the vehicle's windshield and a blue LED light flashes on the charging station;
6. The vehicle's battery is fully charged when the LED light turns green on the charging station;
7. In case you are unable to pull out the charging cable out of the vehicle's charging port, please push the "Unlock" button on the vehicle ignition key again.

Renault Zoe

1. Please open the vehicle's charging latch by pushing an appropriate button inside the vehicle;
2. Approach the SPARK charging station and remove its charging cable;
3. Plug the charging cable into the vehicle's charging port;
4. Activate SPARK charging station with a blue plastic token, which is attached to the vehicle's ignition key;
5. The vehicle is in a charging mode when a blue light flashes on the vehicle's charging port and a blue LED light flashes on the charging station;
6. The vehicle's battery is fully charged when the LED light turns green on the charging station;
7. In case you are unable to pull out the charging cable out of the vehicle's charging port, please push the "Unlock" button on the vehicle ignition key or an appropriate button inside the vehicle again.

Peugeot e-208

1. Please open the vehicle's charging latch and remove the plastic cover;
2. Approach the SPARK charging station and remove its charging cable;
3. Plug the charging cable into the vehicle's charging port;
4. Activate SPARK charging station with a blue plastic token, which is attached to the vehicle's ignition key;
5. The vehicle is in a charging mode when a green LED light flashes on the vehicle's charging port and a blue LED light flashes on the charging station;



S P A R K

6. The vehicle's battery is fully charged when the LED light turns green on the charging station;
7. In case you are unable to pull out the charging cable out of the vehicle's charging port, please push the "Unlock" button on the vehicle ignition key again.

Enjoy your ride with SPARK!